

Fixed Flat Thermal Rooflight


Triple Glazed 0.7 U-Value

TECHNICAL

Manufactured to:

BS EN – 12150 BS

EN -1279

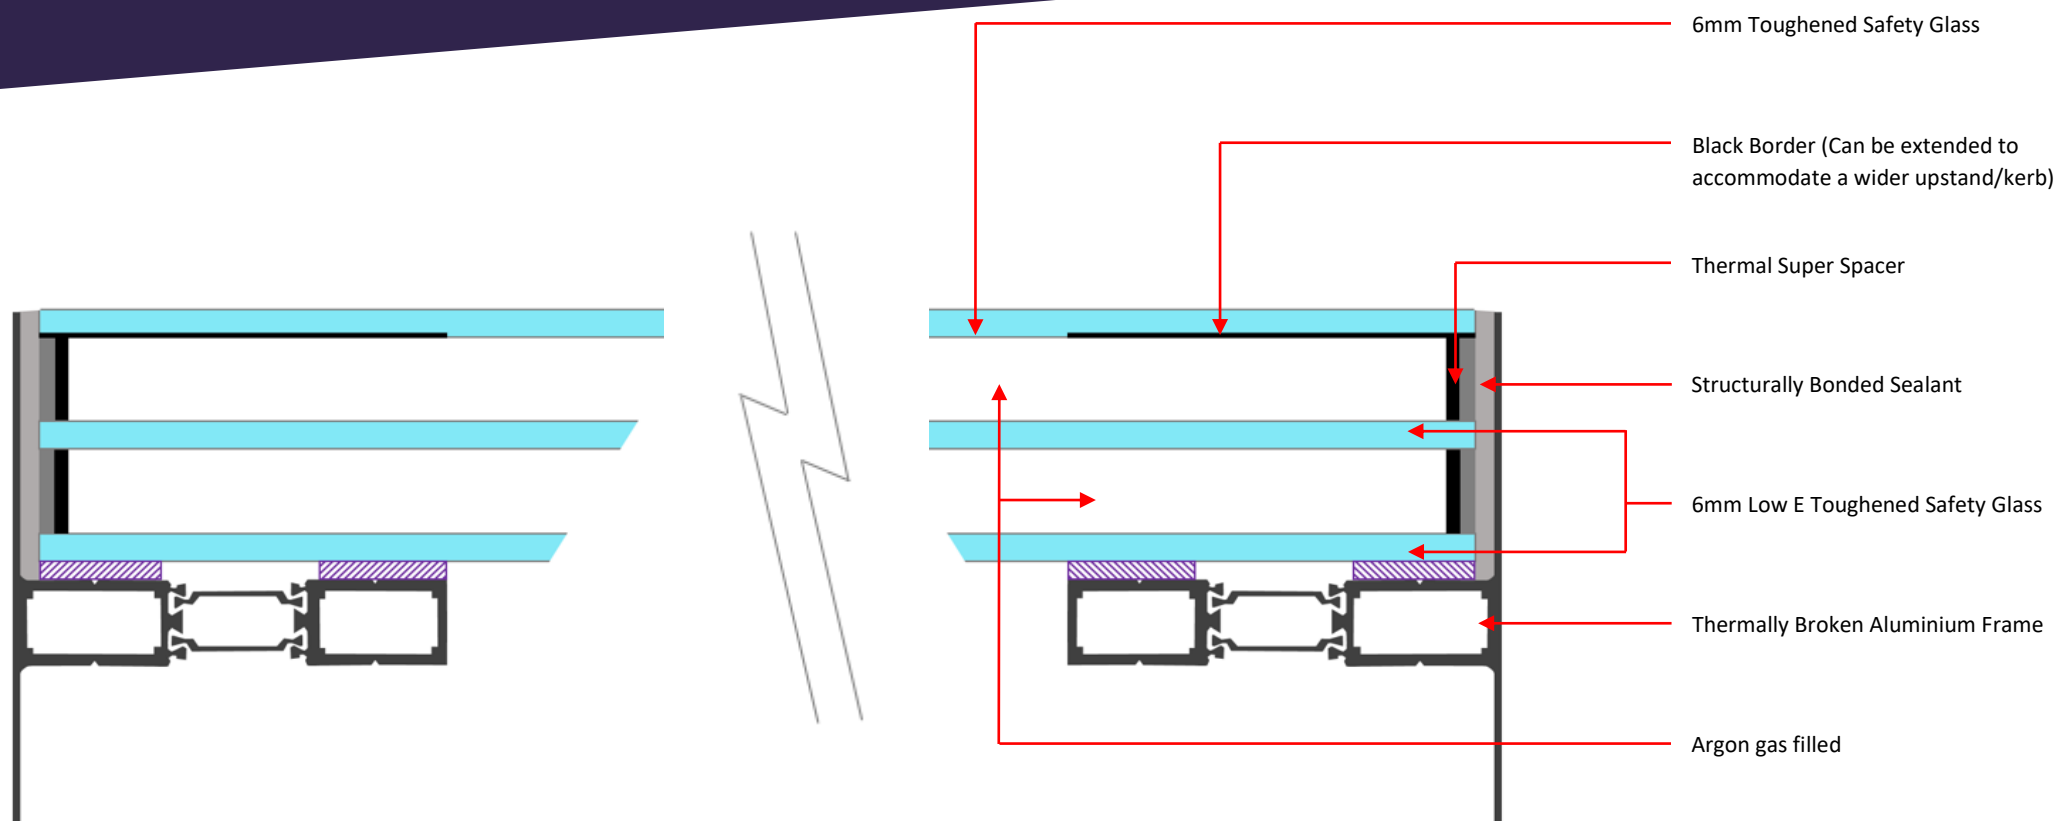

Please note it is the responsibility of the customer to ensure that all products purchased and used are compliant with Building Regulations.

ewe
BUILDING
PLASTICS

Caernarfon: 01286 674 882
Cheadle Hulme: 0161 485 8901
Crewe: 01270 251 044
Mold : 01352 752 006

caernarfon@eweplastics.co.uk
cheadle@eweplastics.co.uk
crewe@eweplastics.co.uk
mold@eweplastics.co.uk

www.eweplastics.co.uk


Option 1 (Fixing from Externally) Fixed Rooflight Installation Guide

Fixed Flat Thermal Rooflight Typical Installation Guide

Triple Glazed

TECHNICAL

Manufactured to
BS EN – 12150
BS EN -1270

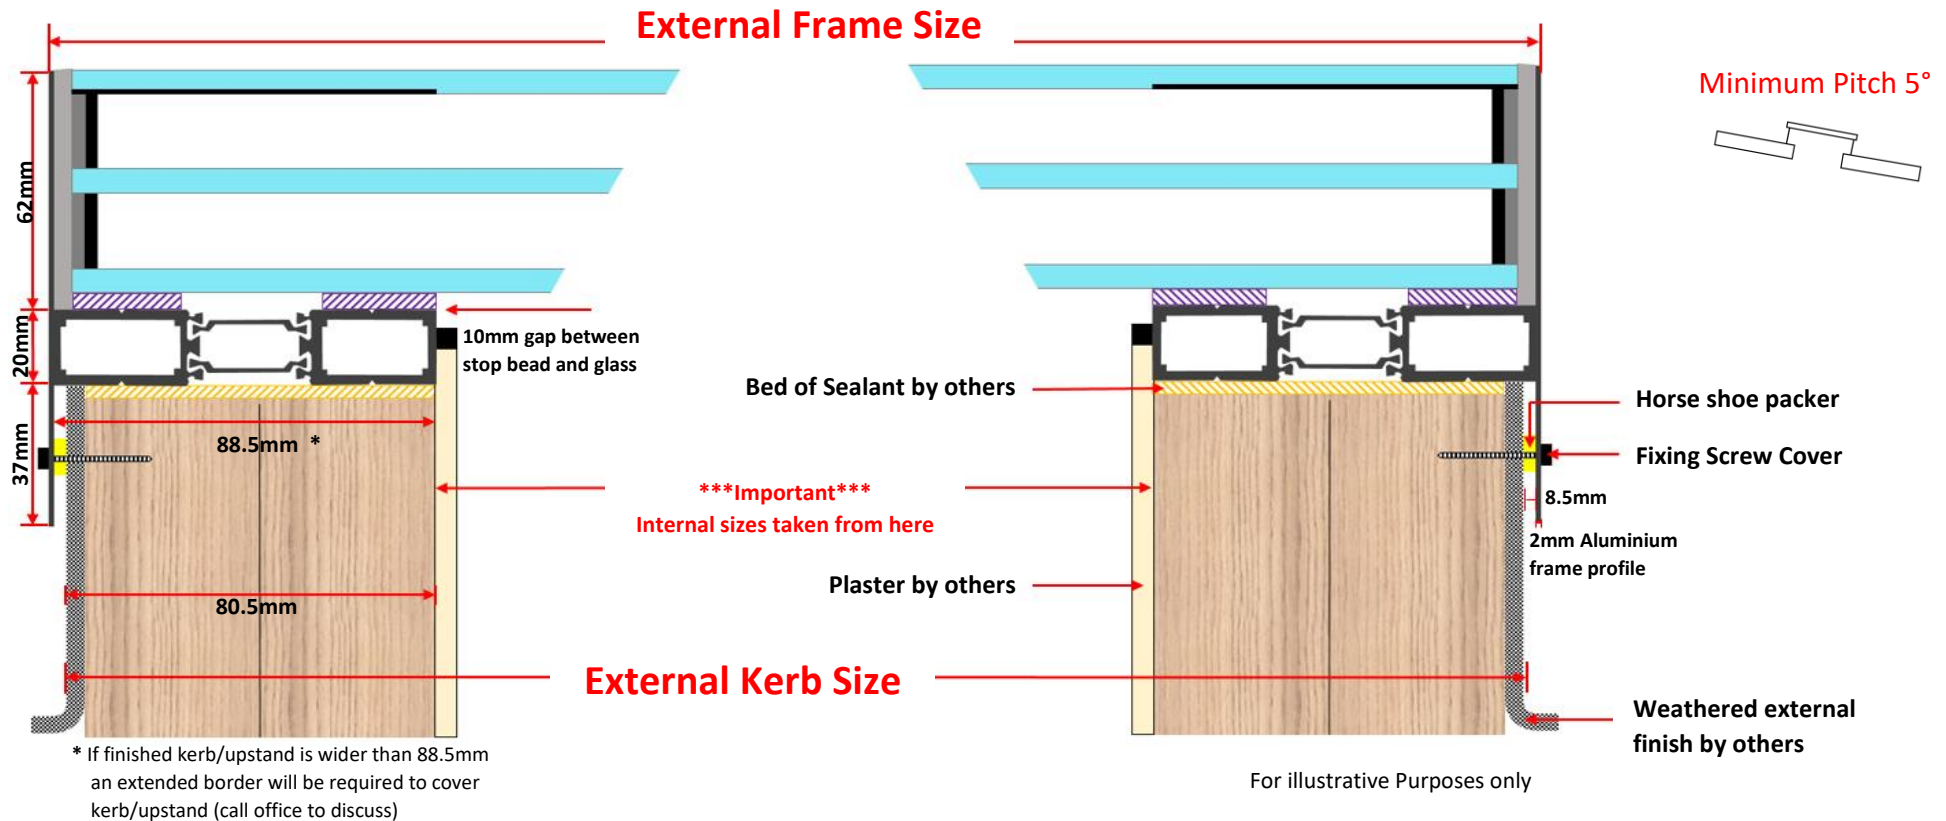


Option 2 (Fixing from Internally) Fixed Rooflight Installation Guide

Fixed Flat Thermal Rooflight Typical Installation Guide

Triple Glazed


TECHNICAL

Manufactured to
BS EN – 12150
BS EN -1270


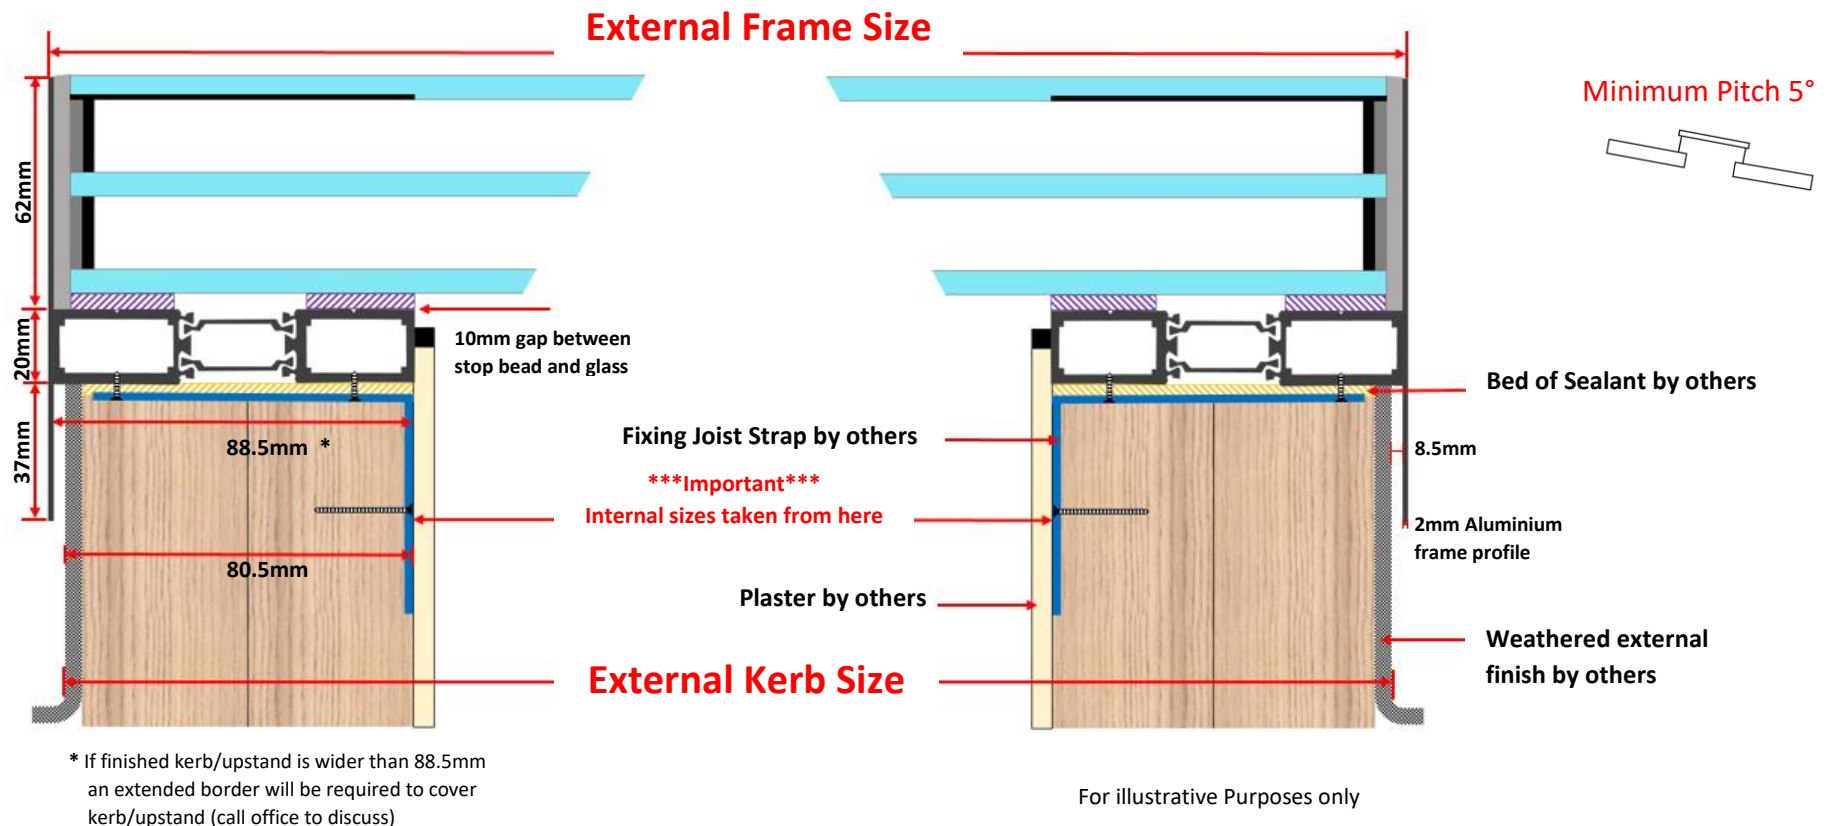


Option 1 (Fixing from Externally) Fixed Rooflight Installation Guide


- 1) Apply a thick bead of silicone all the way around the top of the timber upstand/kerb

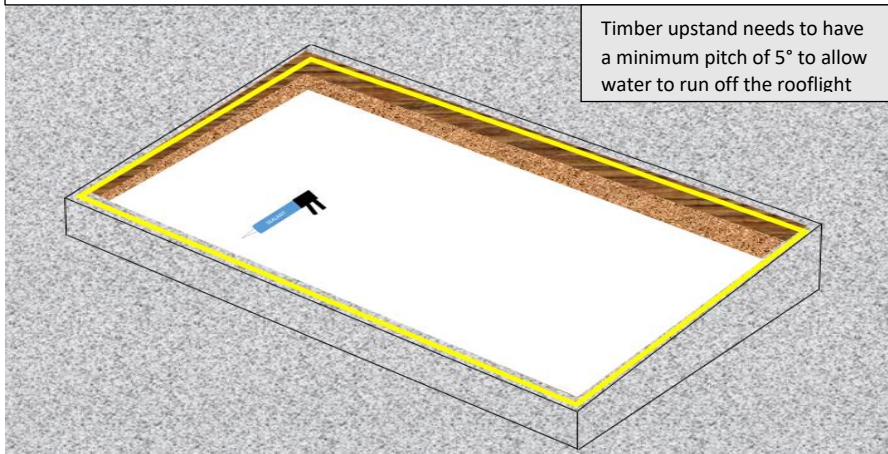

- 2) Position and lower the Rooflight frame over the top and side of the upstand/kerb

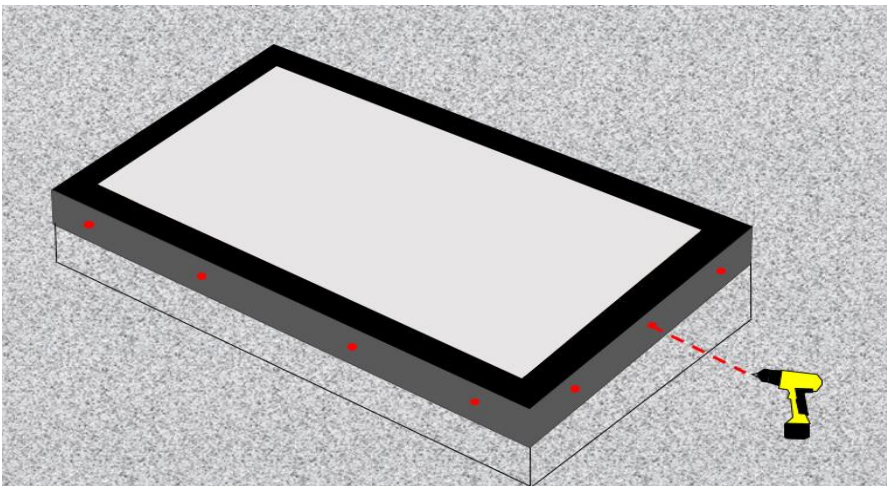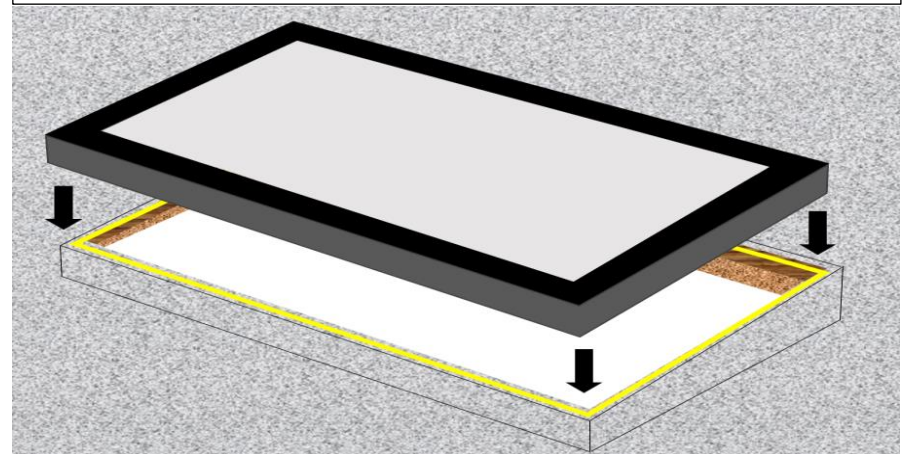


- 3) Pre drill fixing holes through aluminium and timber upstand/kerb at 100mm from each corner and then at regular intervals.

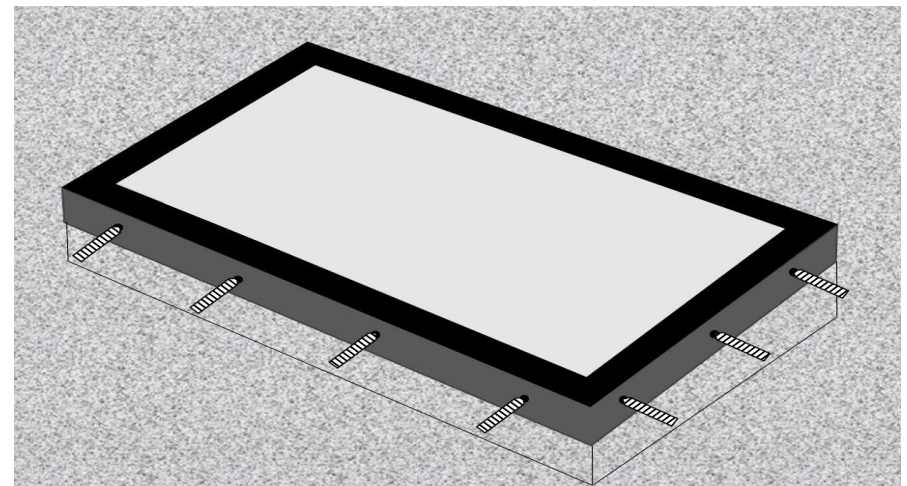




- 4) Secure fixing screws with horse shoe packers and finishing caps continuously all the way around securing the aluminium frame in place.

Option 2 (Fixing from Internally) Fixed Rooflight Installation Guide


- 1) Apply a thick bead of silicone all the way around the top of the timber upstand

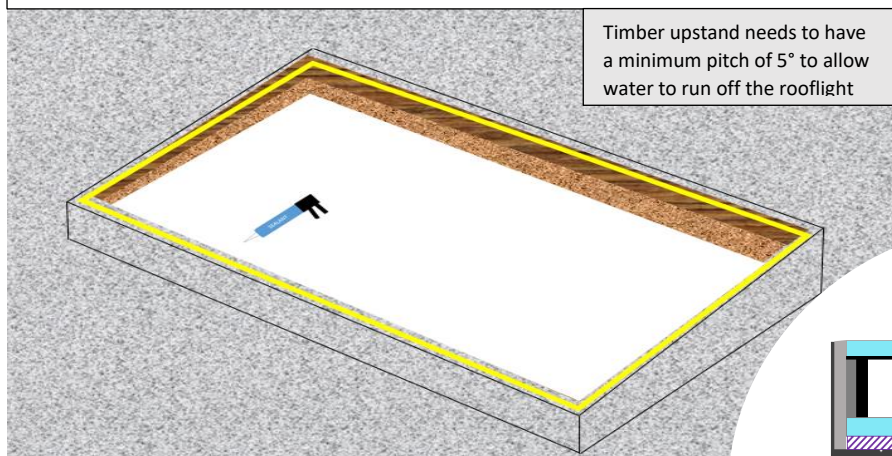

- 2) Position the Rooflight over the upstand ensuring that the fixing straps have been fixed to underside of frame (refer to diagram centre).

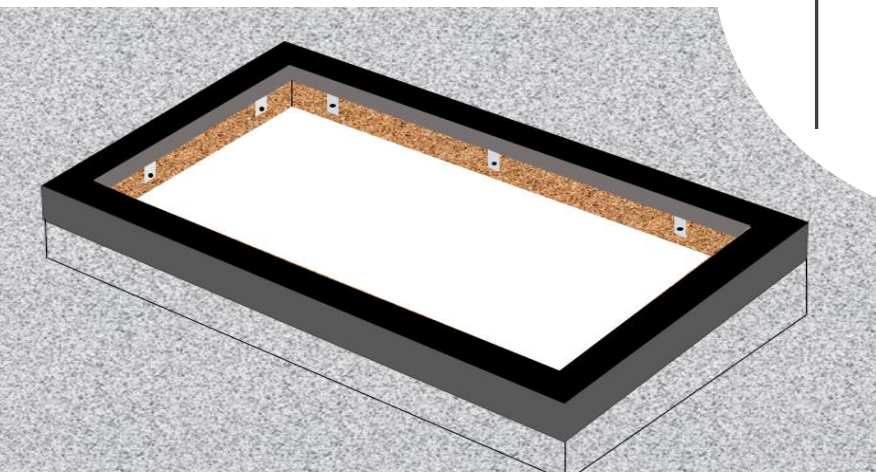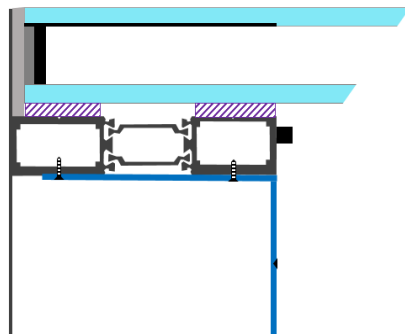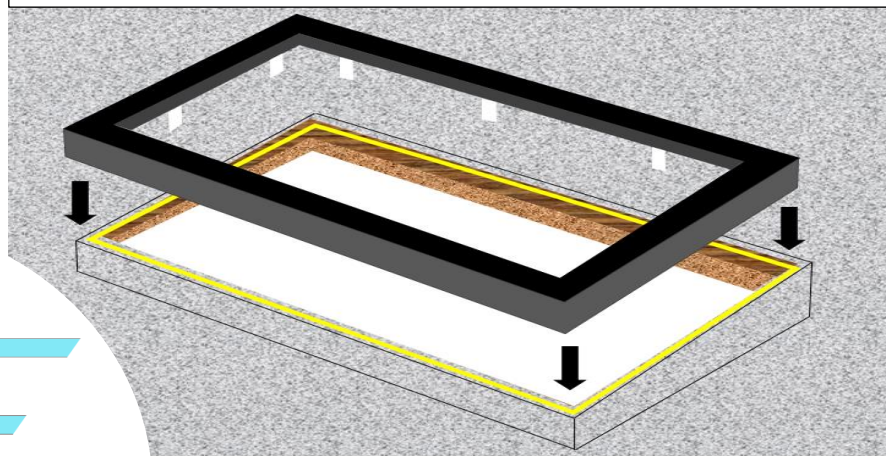

- 3) From the inside secure the fixing straps to inside the timber upstand.

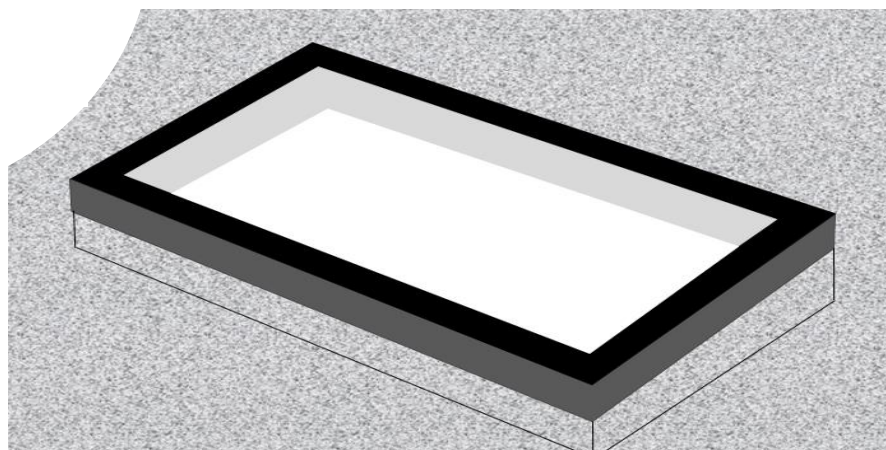

- 4) Internally finish by plaster boarding over the timber and straps leaving at least a 10mm gap from the top of the plasterboard to glass.